

Flensmaattabel

Boringen / NEN-EN 1092-2


D = buitenmaat flens

Dt = buitenmaat pakking

Dh = h-o-h maat boutgaten

ds = diameter boutgat

A = aantal boutgaten per flens

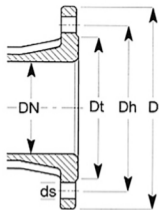

DN	D mm	Dt mm	Dh mm	ds mm	A
25	115	68	85	14	4
30	140	78	100	19	4
40	150	83	110	19	4
50	165	102	125	19	4
65	185	122	145	19	4
80	200	138	160	19	8
100	220	158	180	19	8
125	250	188	210	19	8
150	285	212	240	23	8
200 PN10	340	268	295	23	8
200 PN16	340	268	295	23	12
250 PN10	400	320	350	23	12
250 PN16	400	320	355	28	12
300 PN10	455	370	400	23	12
300 PN16	455	370	410	28	12
350 PN10	520	430	460	23	16
350 PN16	520	430	470	28	16
400 PN10	580	482	515	28	16
400 PN16	580	482	525	31	16